



## Will My Saw Fit the Bora NGX Saw Plate?



## Check these 4 things to ensure compatibility:

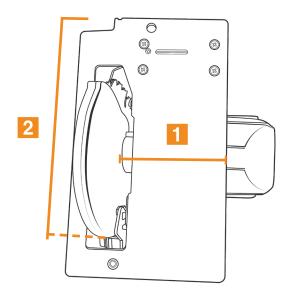

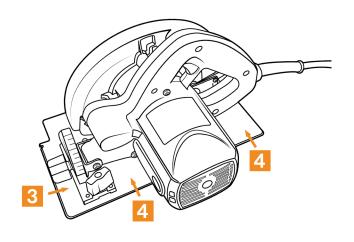

- Blade guard to edge of saw plate width must be between 2 ½ in. and 5 ¼ in.
- Front lip on saw plate ideal width > 3/4 in. (space is needed for clamps to lock in place)
- Front of saw plate to back of blade guard max length **11 3**⁄4 **in.** (no min. restrictions)
- Open space on motor side of saw plate for two locking clamps